


How to install autolaser software

A/. You should unzip the file in the computer

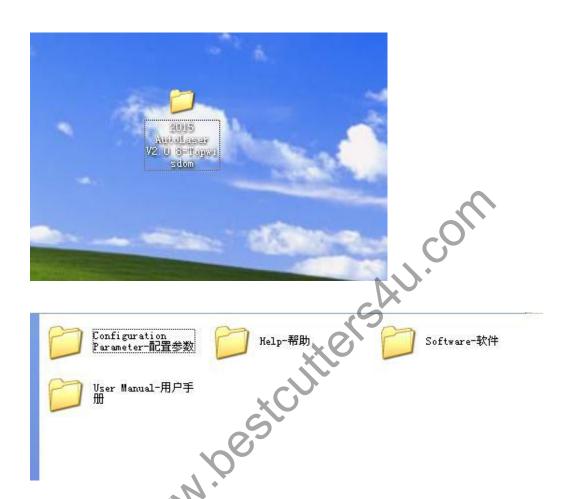

Then you click the software file.

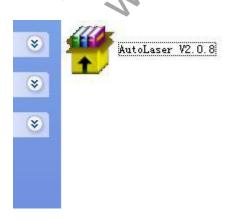

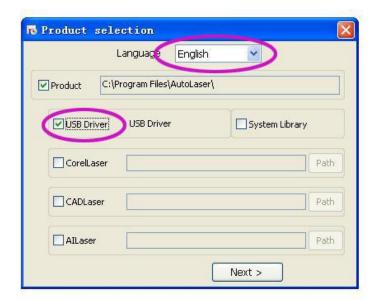



Then next.





Still click next.

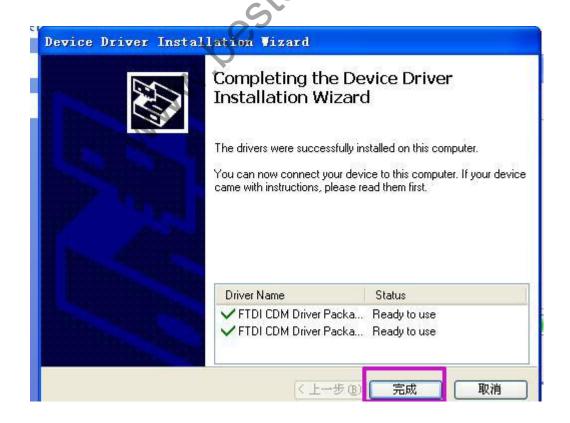


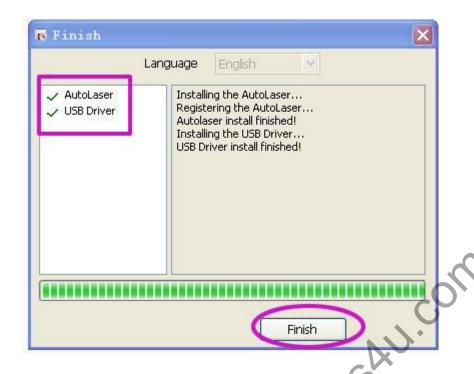

Finally, you click the finish. You will install successfully the software.

Note:If your computer has Coreldrew software, you should choose the CorelLaser.



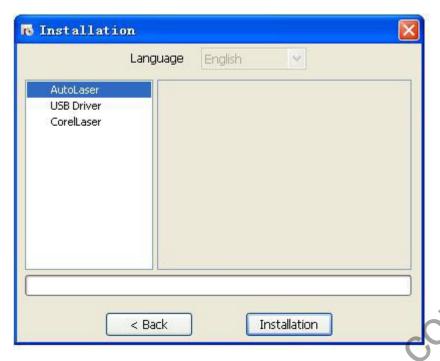







Finish